



The Landlord for Happy Neighborhoods

ENGINE BLOCK HEATERS

- Guide to controlling

Control of engine block heaters

As part of our environmental effort, we have introduced timer control of engine block heaters in our parking areas to save energy.

Internet booking

Block heater control can be easily booked at www.lulebo.se. Click "My pages" and follow the instructions to log in.

Telephone booking

If you are unable to book via the Internet, you can book via telephone. When selecting options, note that there is a brief delay. Wait for confirmation from the telephone voice.

1. Call telephone number 0920-58 92 00

- Enter parking space number: _____
(all seven digits on the contract) press #
- Enter personal code: ____ (the last four digits of your social insurance number of the first person, if there are two names on the contract) press #

2. Main menu

- Recurring time (repeat same time each week) press 1
- Temporary time (single time, not repeated) press 2
- Direct start (starts block heater immediately) press 3
- Hear booked times press 4
- Delete (cancel booked times) press 5

Step 3-5 is only for those who have chosen Recurring time or Temporary time above (1 or 2).

3. Select day


- Monday-sunday press 1-7
- Same time, monday-friday press 8
- Return to main menu press *

4. Enter planned time of departure

- Enter planned time of departure: ____ (four digits) press #
e.g., 06.50 is 0650. Depending on outdoor temperature, power is switched on 30 minutes to 4 hours prior to departure time.

5. Check your booking

- To accept booking press 1
- To cancel booking press *

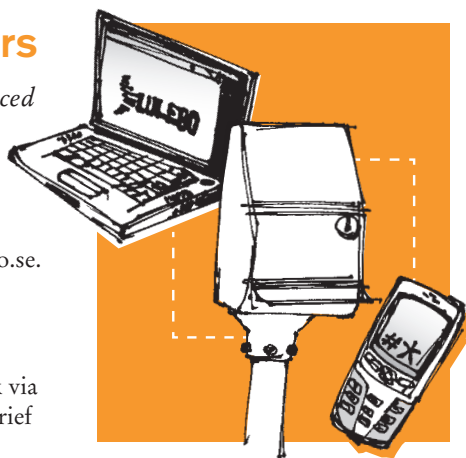

Temporary connection

For temporary connection for 30 minutes:

- pull out the contact, if it is plugged into the outlet
- plug in the contact
- pull out the contact again
- replace the contact within ten seconds and the power switches on automatically.

Problems?

If you do not get an answer or if you do not hear telephone voice confirmation after making your selections, an error has occurred. Ring this number to report errors: 0920-23 67 40.

Resetting the automatic circuit breaker/earth fault breaker

Repeated errors may be the result of excessive power use. Max. 1400 watts, block heater + interior heater. See instructions for resetting on the block heater power outlet post.